

PRODUCT ASSEMBLY INSTRUCTIONS • Item #: Depot-006-B/Depot-022-B SQUARE CAN DOG WASTE STATIONS

Depot-006-B/Depot-022-B DOG WASTE STATION

PARTS LIST:

- Can (1)
- Post (1)
- Dispenser (1)
- Sign (1)
- Spacer (1)
- Hardware Pack (1)
- Dispenser Keys (2) *INSIDE Dispenser
- 400 Bags
- 50 Can Liners




CAN (1)

Can Clamps
Hold Bag In-place



DISPENSER (1)
(Roll Bag or ONEPul®)

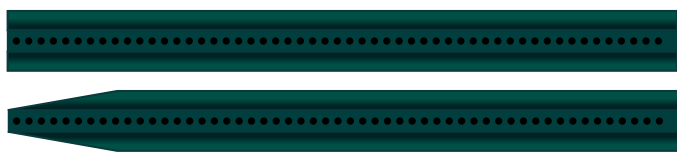

POST* (1)

*2 Post Sections 47 1/2" Each



HARDWARE (1)



SIGN (1)







400 WASTE BAGS



50 CAN LINERS

NUTS & BOLTS LIST:

- 3" Bolt (6)
- A** 
- 1 1/2" Bolt (2)
- B** 
- Flat Washer (8)
- C** 
- Split-Lock Washer (8)
- D** 
- Hex Nuts (8)
- E** 

Item #: Depot-006-B/Depot-022-B DOG WASTE STATION ASSEMBLY INSTRUCTIONS

1. ASSEMBLE POST: Overlap post one 4" onto post two. Thread 2 bolts (B) with 2 flat washers (C) to connect. Tighten with nuts and lock washers (D, E).
2. MARK ASSEMBLED POST 14" from tapered end: bury the post in concrete level to 14" mark.
3. ATTACH CAN: Install 5" above ground; thread the 2 bolts (A) with 2 flat washers (C) through the can from the inside. Line up the bolts with holes in the post and tighten with nuts and lock washers (D, E).
Note: place "Spacer" between the can and the post to level can. (the gap created by post overlap).
4. ATTACH DISPENSER: Line up dispenser 12" ABOVE the top of the can. Thread bolts from the inside of the dispenser. Be sure to put FLAT WASHERS on each bolt before threading bolts through the dispenser. Secure to post with nuts and washers.
5. ATTACH SIGN to top of post with 2 bolts, nuts and washers (use 2 A, C, D, E).
6. FILL DISPENSER with bags – Install Can Liner.

PLEASE BE SURE TO TIGHTEN ALL NUTS AND BOLTS SECURELY

